

- «Mondeo 2001 Table of Contents»
- «Group 3: Powertrain»
- «Section 308-00: MANUAL TRANSMISSION/TRANSAXLE AND CLUTCH GENERAL INFORMATION»
- **«GENERAL PROCEDURES»**

Gearshift Cable Adjustment — Vehicles With: MTX-75/5-Speed Manual Transaxle (165130)

Special Service Tool(s)




Aligner, Gear Shift Lever 308-436 (16-097)

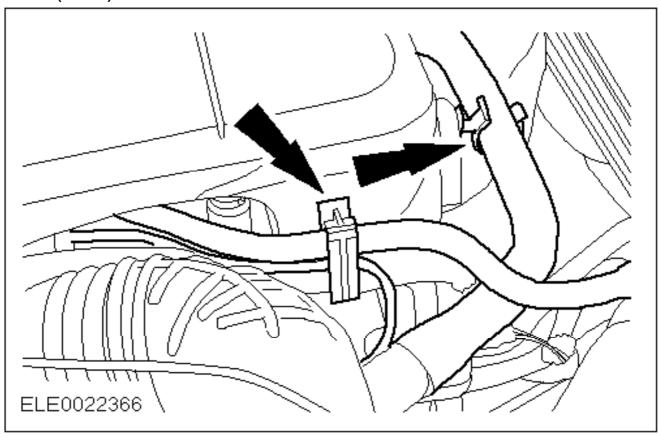


All vehicles

Detach the positive crankcase ventilation (PCV) hose and the vacuum hose from the engine cover.

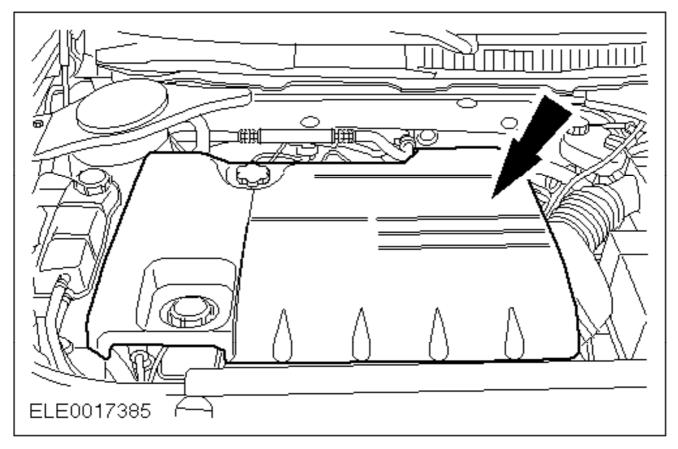


c 2. Remove the engine cover.

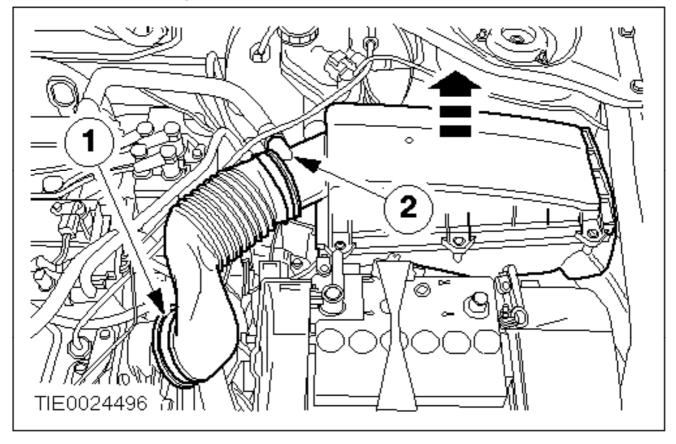

3. Remove the air cleaner.

- 1 Detach the clamp of the air cleaner intake hose to the engine.
- 2 Detach the positive crankcase ventilation (PCV) hose from the air cleaner.

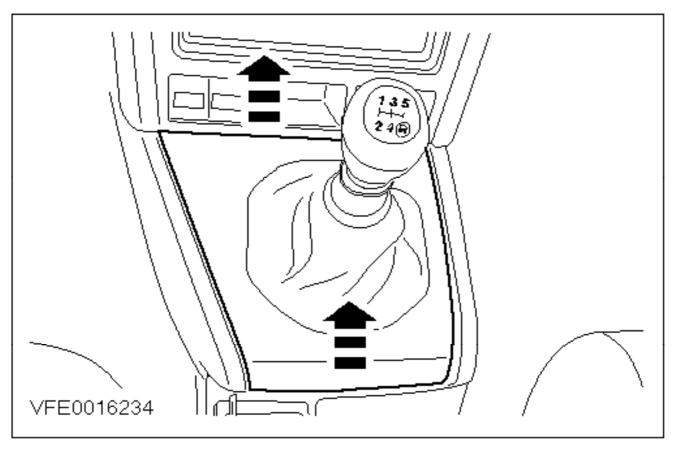


4. Note:

Move the gearshift lever to the neutral position.

Remove the gearshift lever gaiter and trim panel from the center console.


• Remove the damping matting.

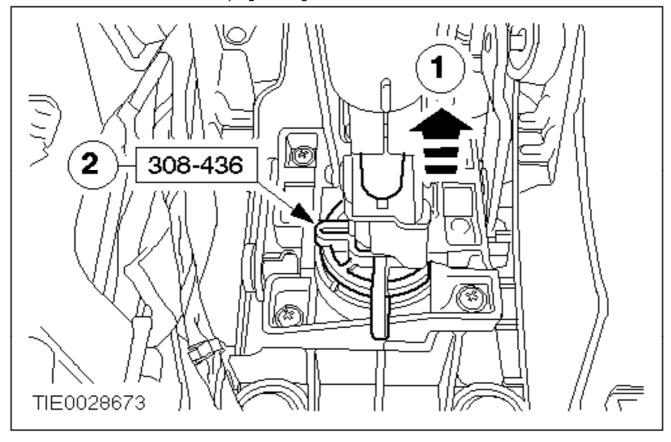


Vehicles built up to 06/2003

5. Lock the gearshift lever using the special tool.


- 1 Pull the reverse gear lock upwards.
- 2 Attach the special tool.

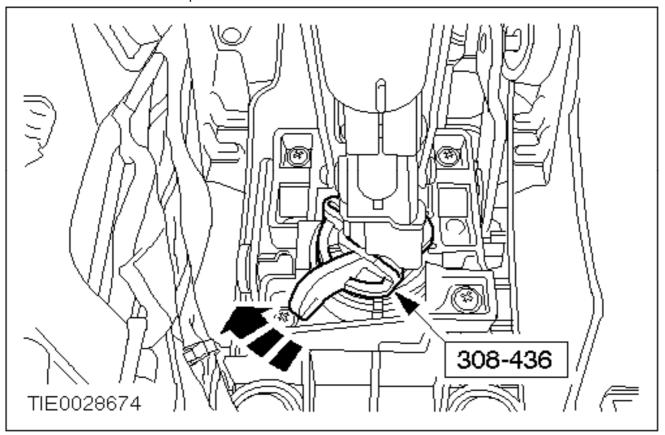

- **c** 6. Turn the special tool approx. 45 degrees clockwise in order to lock the selector mechanism.
 - 7. Raise the vehicle.

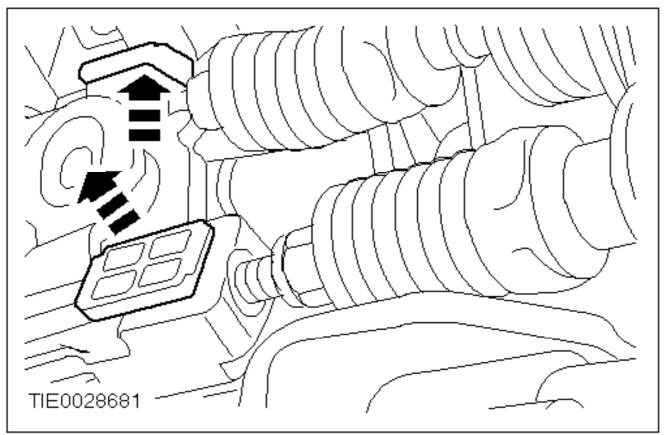


c 8. Release the catches for the gearshift cable and selector cable.

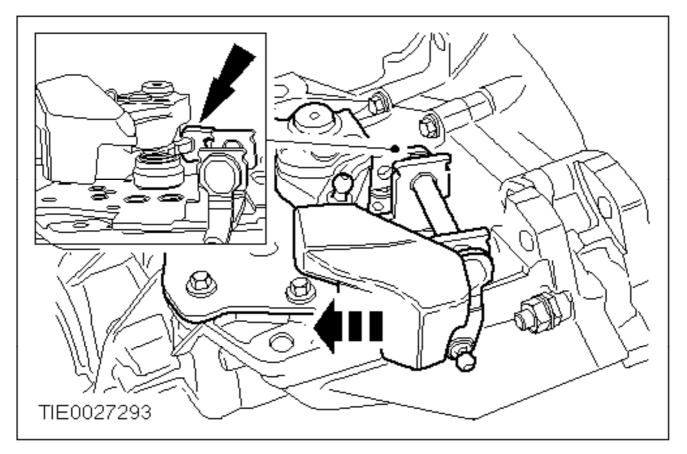

9. Note:


3rd gear is engaged when the elbow is parallel to the base plate, as shown (gearshift cables not shown).

Engage third gear.

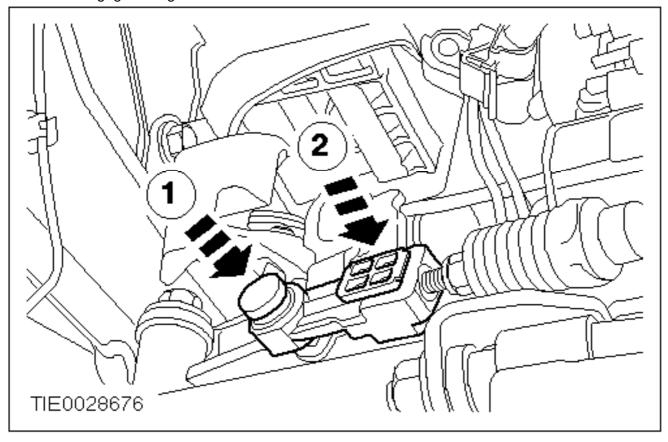


- 10. Attach the selector cable to the selector lever.
 - 1 Attach the selector cable (black) to the selector lever.

2 Adjust the selector cable by pressing in the catch.

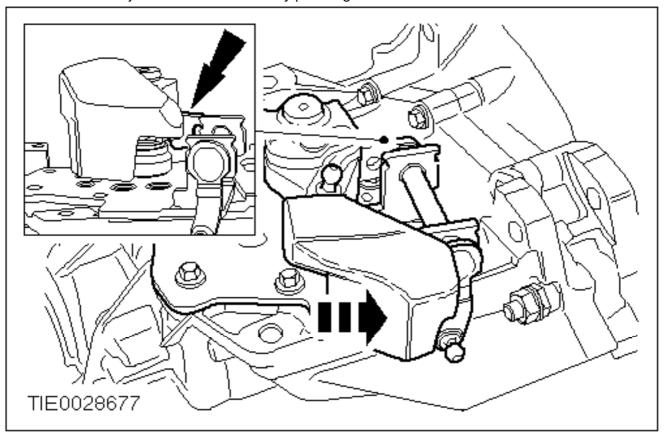


c 11. Shift the transmission into neutral (gearshift cables not shown).

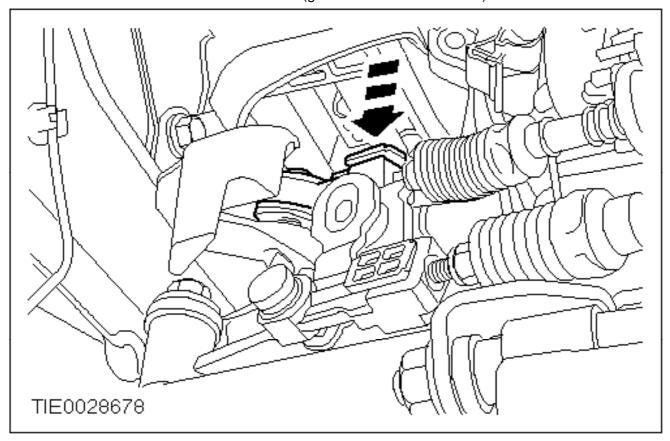


- **c** 12. Attach the gearshift cable to the gearshift lever (if previously detached).
 - 1 Attach the gearshift cable (white) to the gearshift lever.
 - 2 Adjust the gearshift cable by pressing in the catch.


13. Lower the vehicle.

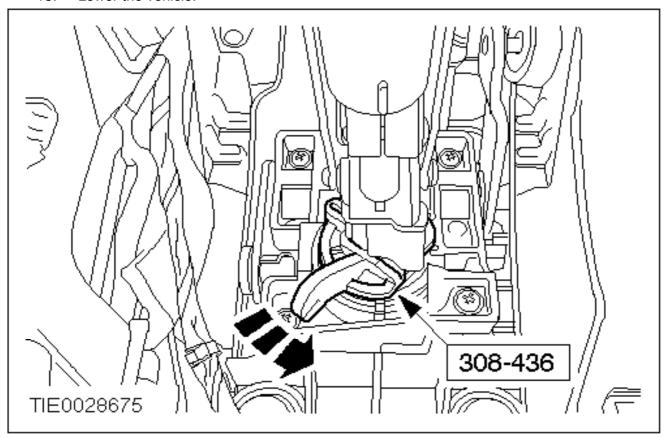


C 14. Turn the special tool counter-clockwise through approx. 45 degrees in order to release the selector mechanism.

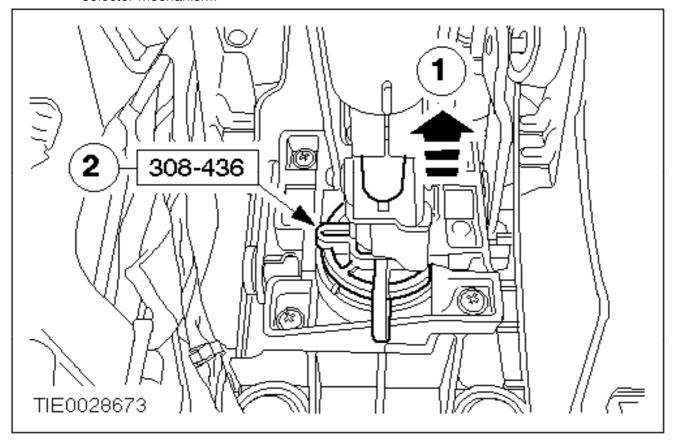


- 15. Remove the special tool.
 - 1 Pull the reverse gear lock upwards.
 - 2 Remove the special tool.

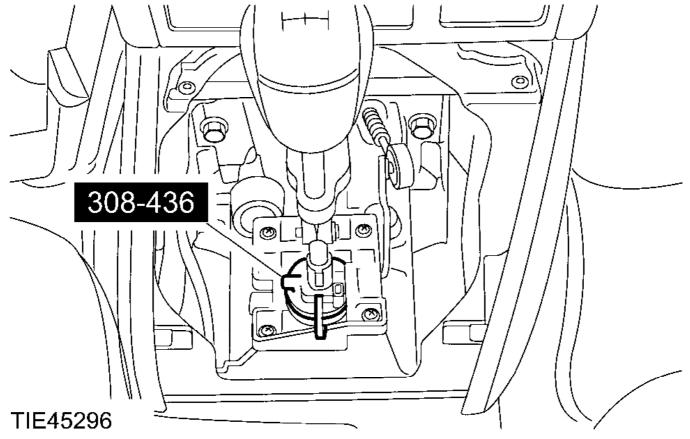


Vehicles built from 06/2003

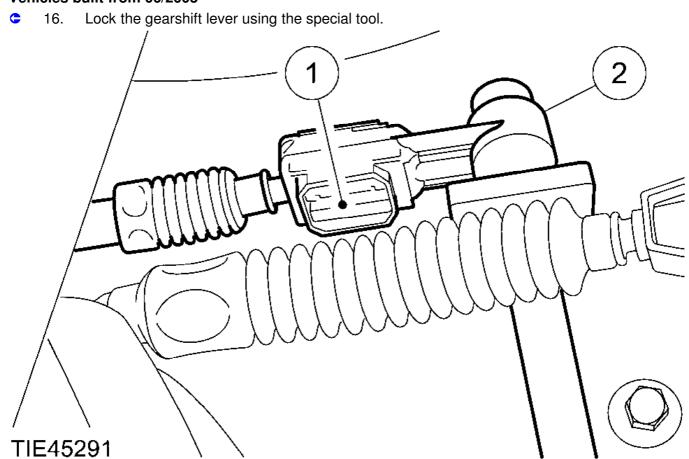


- **c** 17. Detach the selector cable from the selector lever.
 - 1 Release the selector cable adjuster.
 - 2 Press the selector cable catch.

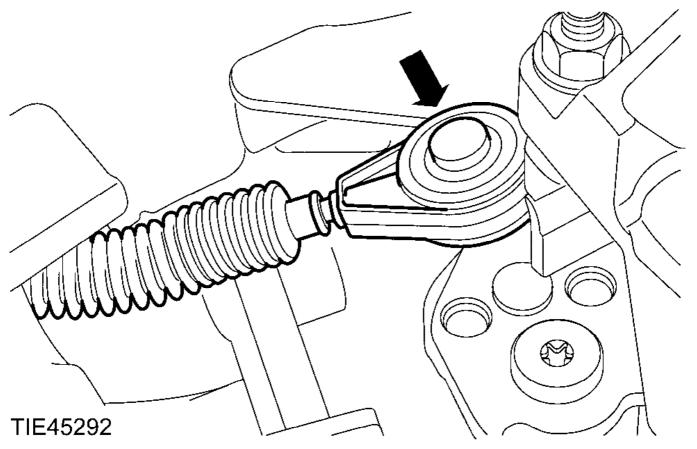


- 18. Detach the gearshift cable from the gearshift lever.
 - Press the gearshift cable catch.

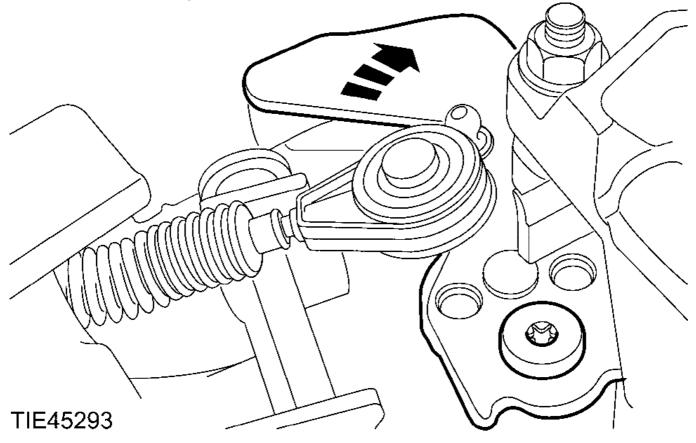


c 19. Shift the transmission into 3rd gear.

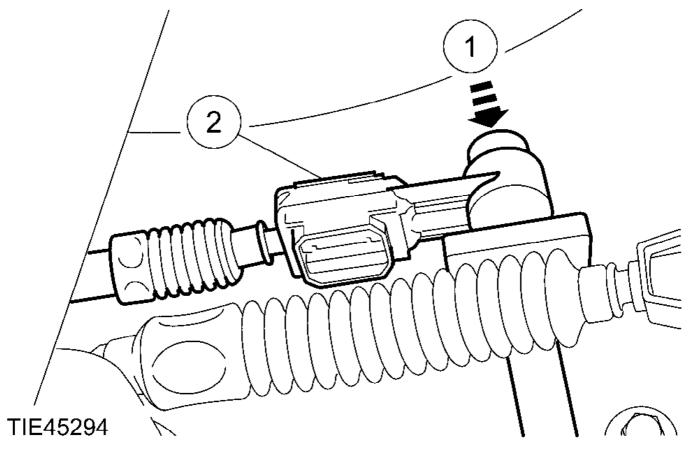


- 20. Adjust the selector cable.
 - 1 Press the selector cable catch and attach the selector cable to the selector lever.
 - 2 Lock the selector cable adjuster.

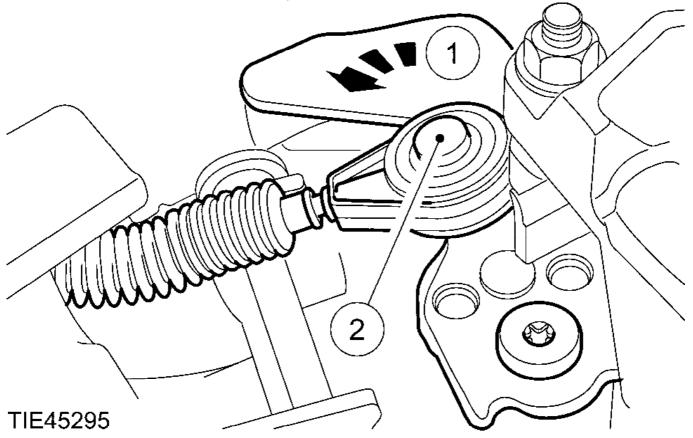

- **c** 21. Attach the gearshift cable to the gearshift lever.
 - 1 Shift the transmission into neutral.

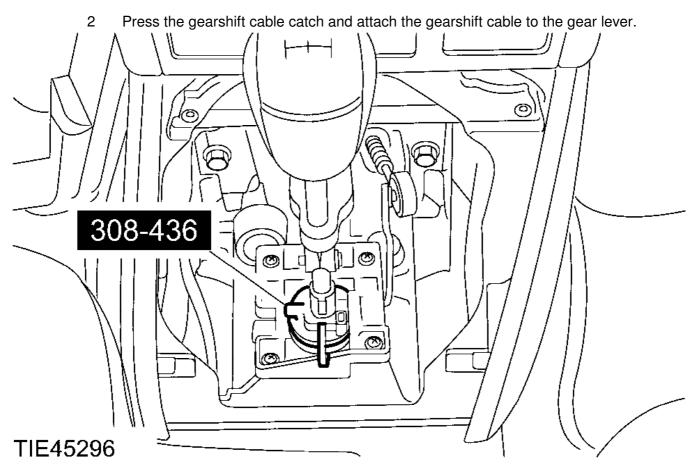


c 22. Remove the special tool.

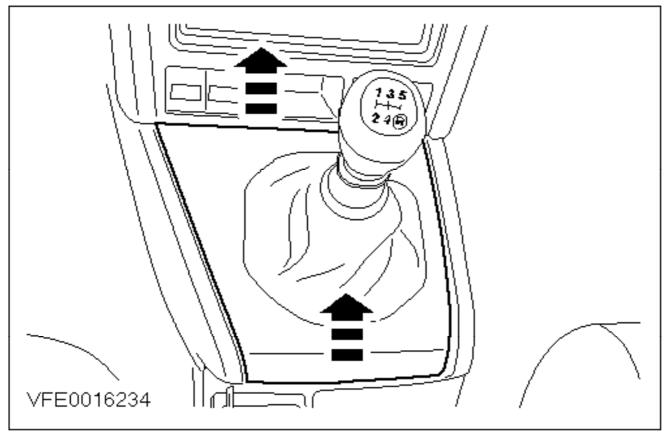


All vehicles


- **c** 23. Attach the gearshift lever gaiter and trim panel to the center console.
 - Install the damping matting.

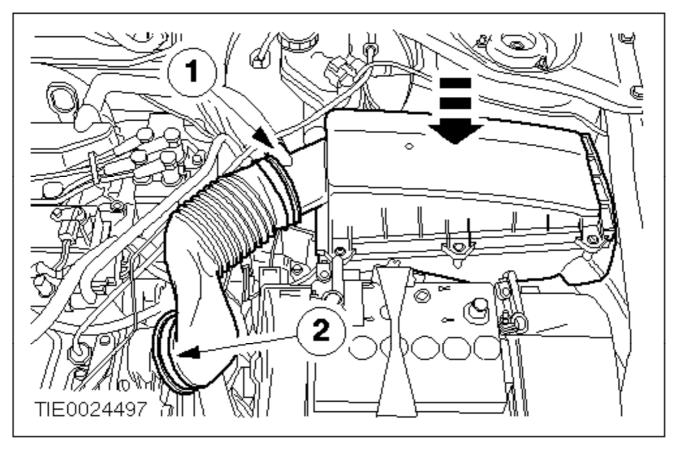

- c 24. Install the air cleaner.
 - 1 Connect the positive crankcase ventilation (PCV) hose.
 - 2 Attach the air cleaner to engine intake hose clamp.

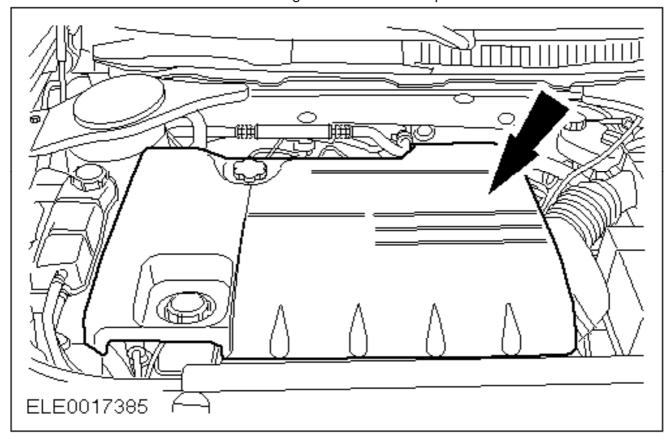

c 25. Install the engine cover.

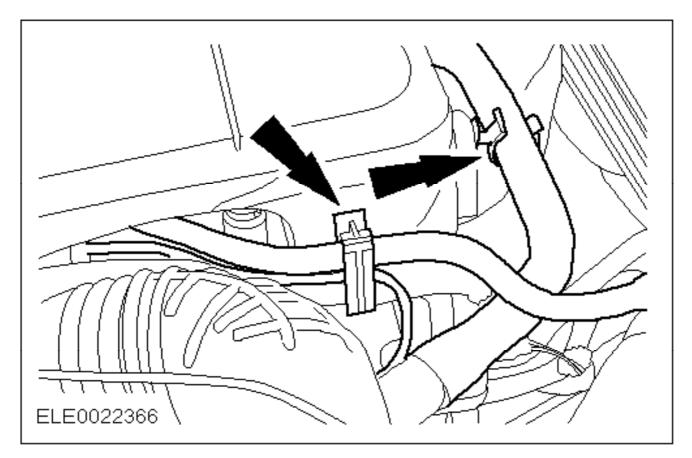

26. Attach the positive crankcase ventilation (PCV) hose and the vacuum hose to the engine cover.